SAMSUNG

HW-H500

User manual

Wireless Audio - SoundStand

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please register your product at
www.samsung.com/register

FEATURES

TV SoundConnect

TV SoundConnect lets you listen to audio from your TV on your SoundStand via a Bluetooth connection and lets you control the sound.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience. Surround Sound Expansion is powered by Sonic Emotion.

Special Sound Modes

You can select different sound modes - SPORTS / VOICE / MUSIC / STANDARD (OFF) - depending on the type of content you want to enjoy.

Multi-function Remote Control

You can use the supplied remote control to control various operations with the simple press of a button.

Bluetooth Function

You can use connect a Bluetooth device to the SoundStand and enjoy music with high quality stereo sound, all without wires!

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH THE WIDE BLADE OF THE PLUG TO THE WIDE SLOT OF THE OUTLET. FULLY INSERT THE PLUG.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases,on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

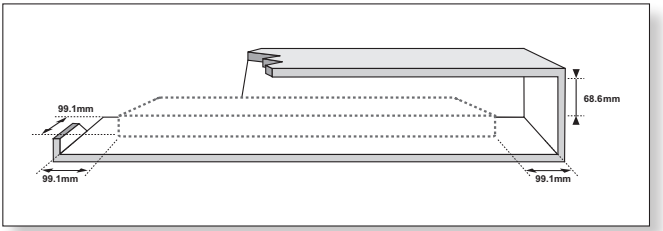

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation 7~10 cm. Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

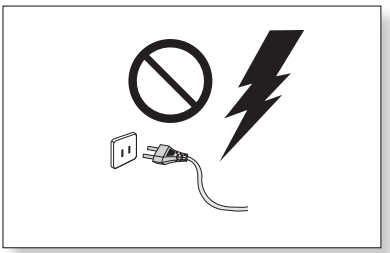

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

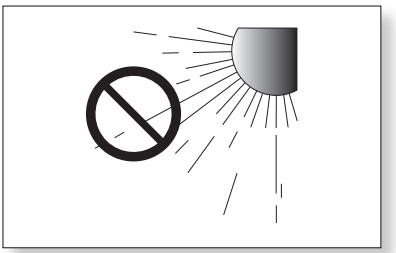

Do not expose the unit to direct sunlight or other heat sources.

This could lead to overheating and cause the unit to malfunction.

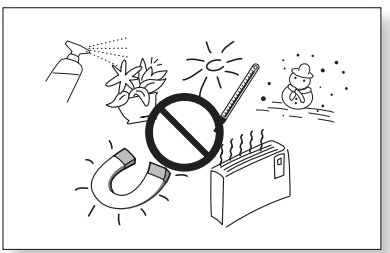

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

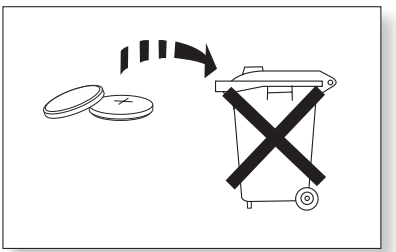

The batteries used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Do not dispose of batteries in a fire.

Do not short circuit, disassemble, or overheat the batteries.

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

CONTENTS

2 FEATURES

3 SAFETY INFORMATION

3 Safety warnings

4 Precautions

6 GETTING STARTED

6 Before reading the user's manual

6 What's included

7 INSTALLATION

7 SoundStand installation

8 DESCRIPTIONS

8 Top/front panel

9 Rear panel

10 REMOTE CONTROL

10 Remote control buttons and functions

12 CONNECTIONS

12 Connecting an external device using OPTICAL (DIGITAL) cable or AUDIO (ANALOG) cable

13 FUNCTIONS

13 Input mode

14 Bluetooth

16 TV SoundConnect

17 TROUBLESHOOTING

18 APPENDIX

18 Specifications

18 License

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either
  (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read).
  (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

GETTING STARTED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help you operate a function.

► Safety Instructions and Troubleshooting

1) Be sure to familiarise yourself with the Safety Instructions before using this product. (See page 3)
2) If a problem occurs, check Troubleshooting. (See page 17)

► Copyright

©2014 Samsung Electronics Co.,Ltd.
All rights reserved; no part of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED

Check for the supplied accessories shown below.

Remote Control / Lithium Battery (3V : CR2032)



User Manual

AUX Cable(3.5Φ)

Adapter

Power Cord

- The appearance of the accessories may differ slightly from the illustrations above.

INSTALLATION

SOUNDSTAND INSTALLATION

If you want to place your TV on top of the SoundStand, please make sure that your TV satisfies the two conditions below:

- Maximum TV weight : **26 kg**
- Maximum TV stand dimension : **Smaller than 600 mm X 300 mm**

※ Fits most TVs up to 1016 mm and up to 26kg (*TV screen size and stand type may vary)

► How to install the SoundStand

	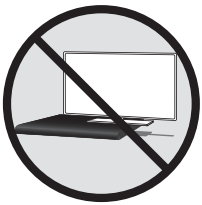
Correct installation	**Do not place the TV to one side on the SoundStand**
	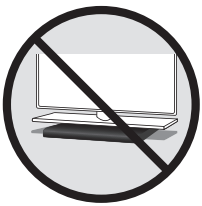
Do not place the SoundStand near the edge of a TV shelf, table, or entertainment center.	**Do not place a TV whose base is bigger than the SoundStand's top surface on the SoundStand.**

- Do not place the TV to one side on the SoundStand. The TV may tip over and may cause physical injury.
- Make sure to place the SoundStand in the center of the shelf, table, etc., when you install it. Do not place it near an edge.
- If the TV is bigger than the SoundStand, consider a wall-mounted TV installation or place the SoundStand on a stable surface.
- Keep the SoundStand at least 5 cm away from the wall when you install it.

DESCRIPTIONS

TOP/FRONT PANEL

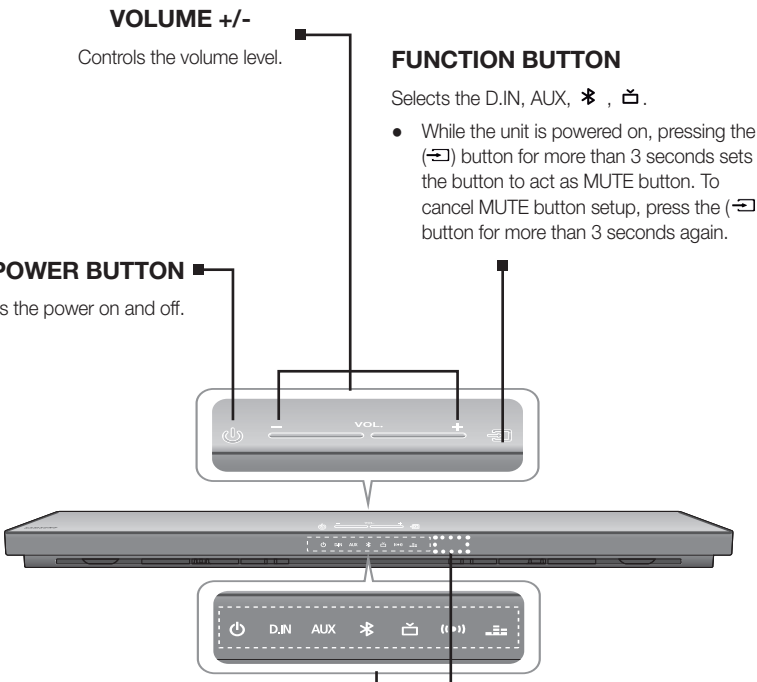
VOLUME +/-
Controls the volume level.
FUNCTION BUTTON
Selects the D.IN, AUX, , .
While the unit is powered on, pressing the ( ) button for more than 3 seconds sets the button to act as MUTE button. To cancel MUTE button setup, press the ( ) button for more than 3 seconds again.
POWER BUTTON
Turns the power on and off.
VOL
D.IN
AUX
LED
Display the current mode.
REMOTE CONTROL SENSOR
The remote control can operate SoundStands made by SAMSUNG only.

- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- When you press each button,LED will lighten and it will be dimmed down after 3 seconds.
- If you want to enjoy the sound only from the SoundStand, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

DESCRIPTIONS

REAR PANEL

OPTICAL IN

Connect to the digital (optical) output of an external device.

AUX IN

Connect to the Analog output of an external device.

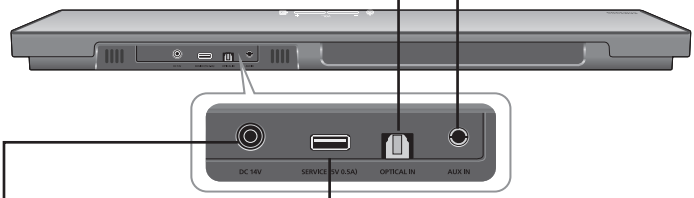

Power Supply IN

Connect the AC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

SERVICE Port(Only for update)

Use to update the unit's firmware.

- When disconnecting the power cable of the AC power adaptor from the wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.
- For safety information, including product identification and supply ratings, please refer to the main label on the bottom of the device.

REMOTE CONTROL

REMOTE CONTROL BUTTONS AND FUNCTIONS

POWER
Turns the SoundStand on and off.

D.IN
Press the **D.IN** button to select Digital in.

VOLUME
Adjusts the volume level of the unit.
If you set the volume to Max or Min, all the LEDs turn on.

Bluetooth
Press the **Bluetooth** button to select Bluetooth mode.

Bluetooth POWER
Press the **Bluetooth POWER** button on the remote to turn the Bluetooth Power function on and off.
See pages 15 and 16 for details.

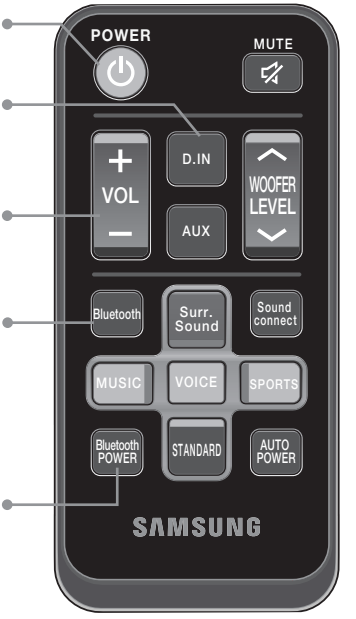

► Installing the Batteries in the Remote Control

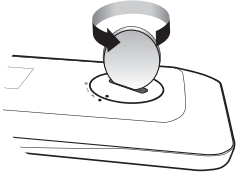

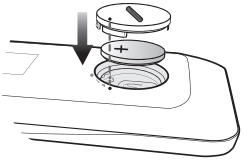

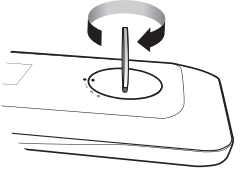

1. To open the battery compartment, use a suitable coin to turn the remote control's battery cover counterclockwise as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.
3. To close the battery compartment, use a suitable coin to turn the remote control's battery cover clockwise as shown in the figure above.

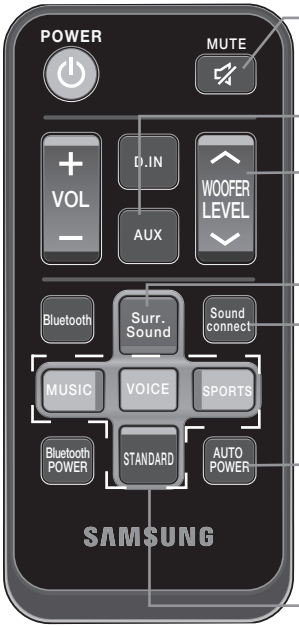

MUTE

Push the Mute button to turn the volume down to 0.Press again to restore the sound to the previous volume level. If you turn mute on, the current function LED keeps blinking.

AUX

Press the AUX button to select the AUX mode.

WOOFER LEVEL

You can control the woofer volume.

Press ∧ or ∨ button on the **WOOFER LEVEL** button to increase or decrease the woofer volume. You can set it from SW -6 to SW +6.

Surr.Sound (Surround Sound Expansion)

Press the **Surr.Sound** button on the remote to add depth and spaciousness to the sound.

Soundconnect

Press the **Soundconnect** button to select TV SoundConnect.

AUTO POWER

Synchronizes the SoundStand to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. See pages 12 for details.

SOUND EFFECT

Press each button (MUSIC, VOICE, SPORTS, STANDARD) on the remote control to select a sound mode. Select the **STANDARD** mode if you want to enjoy the original sound. We recommend that you select a Sound Effect mode based on the source material and your personal taste.

- SoundStand is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

CONNECTIONS

CONNECTING AN EXTERNAL DEVICE USING OPTICAL (DIGITAL) CABLE OR AUDIO (ANALOG) CABLE

This unit comes equipped with one optical in digital jack and one audio analog in jack, giving you two ways to connect it to a TV.

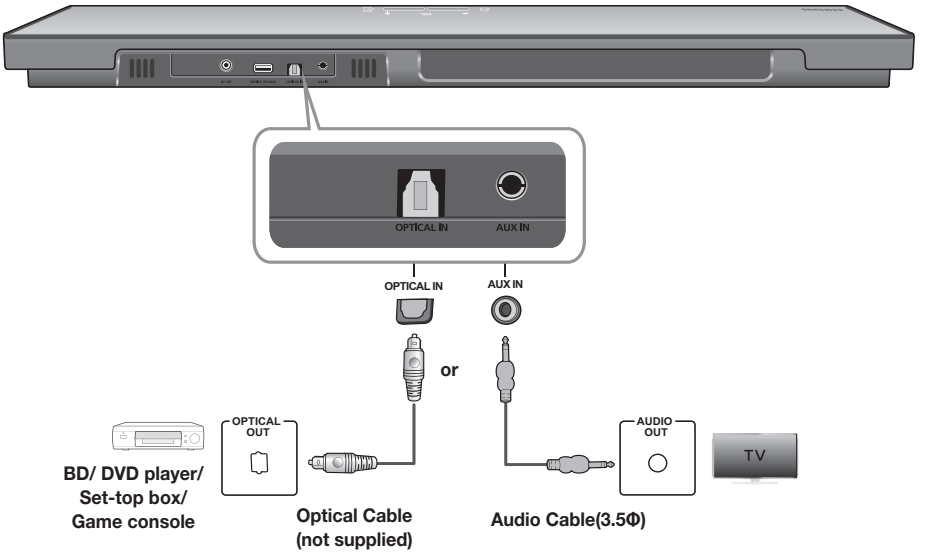

OPTICAL IN

Connect **OPTICAL IN** on the main unit to the OPTICAL OUT of the TV or Source Device.

- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord

AUTO POWER LINK function.

AUTO POWER LINK	LED
ON	Green ⏻ and D.IN blinks
OFF	Red ⏻ and D.IN blinks

- Using the AUTO POWER LINK function
  - If you connect the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the SoundStand turn on automatically when you turn the TV on.
  - Press the AUTO POWER button on the SoundStand remote to turn the AUTO POWER function on or off.
  - The Auto power function turns on and off each time you press AUTO POWER.
  - Depending on the connected device, Auto Power Link may not function.

or,

AUX IN

Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT of the TV or Source Device.

FUNCTIONS

INPUT MODE

Press each mode button on the remote control or the (⇄) button on the product's top panel to select the mode you want.

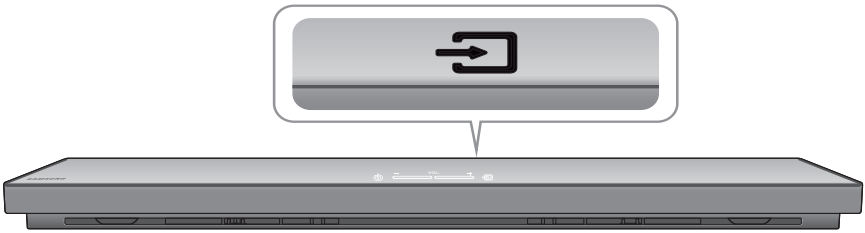

Input mode	Display
Optical Digital input	**D.IN**
AUX input	**AUX**
BLUETOOTH mode	✱
TV SoundConnect	📺

The unit turns off automatically in the following situations.

- D.IN/BT/TV SoundConnect
  - If there is no audio signal for 25 minutes.

- AUX Mode
  - If the AUX cable is disconnected for 25 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected. To turn this function ON or OFF, press and hold the AUX button for 5 seconds in AUX mode. AUTO POWER DOWN ON / OFF appears on the display.

AUTO POWER DOWN	LED
ON	Green ⏻ and AUX blinks
OFF	Red ⏻ and AUX blinks

BLUETOOTH

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

► To connect the SoundStand to a Bluetooth device

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

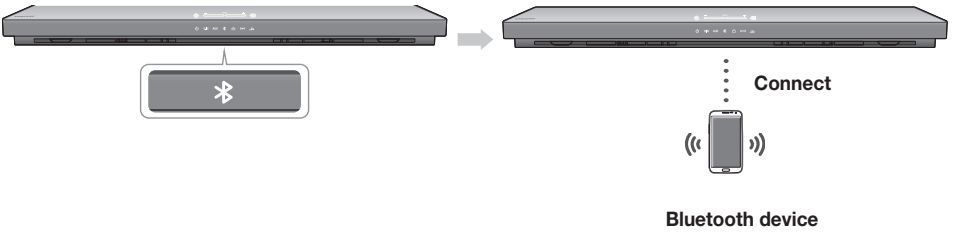

1. Press the ( ) button on the product's top panel to display the icon LED.
   - The LED will blink indicating that the Bluetooth device is not connected yet.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select the Stereo headset menu on the Bluetooth device.
   - You will see a list of scanned devices.
4. Select **"[Samsung] SoundStand"** from the list.
   - If the Bluetooth device is successfully connected to the SoundStand, then the LED will stop blinking.
   - If the Bluetooth device has failed to pair with the SoundStand, delete the previous "**[Samsung] SoundStand**" found by the Bluetooth device and have it search for the SoundStand again.
5. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the SoundStand.

- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the SoundStand off.
- The SoundStand may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the SoundStand.
  - If several Bluetooth devices are simultaneously paired with the SoundStand.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The SoundStand supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the SoundStand to a Bluetooth device that supports only the HF (Hands Free) function.

► Bluetooth POWER On (Bluetooth POWER)

When the Bluetooth Power On function is on and the SoundStand is turned off, if a previously paired Bluetooth device tries to pair with the SoundStand, the SoundStand turns on automatically.

1. Press the **Bluetooth POWER** button on the remote control.
2. The GREEN ⏻ , ✱ and, 📺 LEDs appear on the SoundStand's display.

- Available only if the SoundStand is listed among the Bluetooth device's paired devices. (The Bluetooth device and the SoundStand must have been previously paired at least once.)
- The SoundStand will appear in the Bluetooth device's searched devices list only when the Bluetooth LED is blinking.
- In the TV SoundConnect mode, the SoundStand cannot be paired to another Bluetooth device.

► To disconnect the Bluetooth device from the SoundStand

You can disconnect the Bluetooth device from the SoundStand. For instructions, see the Bluetooth device's user manual.

- The SoundStand will be disconnected.
- When the SoundStand is disconnected from the Bluetooth device, the ✱ will blink on the SoundStand's front display.

► To disconnect the SoundStand from the Bluetooth device

Press one of the other mode buttons on the remote control or the (⏎) button on the product's top panel to switch from ✱ to another mode or turn off the SoundStand.

- The connected Bluetooth device will wait a certain amount of time for a response from the SoundStand before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the SoundStand and the Bluetooth device exceeds 5m.

More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the SoundStand.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the SoundStand with the Bluetooth device while they are close together.
- The further the distance between the SoundStand and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

TV SOUNDCONNECT

You can enjoy TV sound through your SoundStand when it is connected to a Samsung TV that supports the TV SoundConnect function.

► Connecting a TV to the SoundStand

1. Turn on the TV and SoundStand.
   - Set the "Add New Device" menu selection of the TV to "On".
2. Press the (⇄) button on the main unit's top panel or the **Soundconnect** button on the remote control to select the **TV** mode.
   - The LED will blink indicating that TV is not connected yet.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears. "[Samsung] SoundStand" is displayed on the TV screen.
4. Select **<Yes>** using the TV remote to finish connecting the TV and SoundStand.
   - The LED will stop blinking when TV is successfully connected.

- Switching the SoundStand's mode from TV to another automatically terminates TV SoundConnect.
- To connect the SoundStand to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, then press the **Soundconnect** button on the remote control for 5 seconds to connect to another TV.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (Soundshare) function before you begin. (For further information, refer to the TV's user manual.)
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and SoundStand exceeds 5m, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or SoundStand so that they are within operational range, and then re-establish the TV SoundConnect connection.

- TV SoundConnect Operational Range
  - Recommended pairing range: within 50cm.
  - Recommended operational range: within 5m.

► Using the Bluetooth POWER On function with TV SoundConnect.

The Bluetooth POWER On function is available after you have successfully connected the SoundStand to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the SoundStand's power on and off as well.

1. Connect the TV with your SoundStand using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the SoundStand remote. The GREEN ⏻ , ✱ and, LEDs appear on the SoundStand's display.
   - GREEN ⏻ : The SoundStand turns on or off when you turn the TV on or off.
   - RED ⏻ : The SoundStand turns off when you turn the TV off.

- This function is supported only by some Samsung TVs released from 2013 on.
- If the SoundStand is connected to a TV through TV SoundConnect, and you turn the SoundStand off by turning off the TV, the Bluetooth Power function will not turn the SoundStand on, even if you connect another Bluetooth device to it.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the air?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the Mute button to cancel the function.
• Is the volume set to minimum?	→ Adjust the volume.

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released after 2012. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung call center.
• Reset the TV MODE and connect again.	→ Press and hold the **Soundconnect** button for 5 seconds to reset the TV SoundConnect connection.

APPENDIX

SPECIFICATIONS

Model name	HW-H500

GENERAL	USB	5V/0.5A
	Weight	3.6 kg
	Dimensions (W x H x D)	605 x 37 x 305 mm
	Operating temperature range	+5°C ~ +35°C
	Operating humidity range	10 % to 75 %
AMPLIFIER	Rated output power	60 W(MID/TWT = 8 OHM, SW = 4 OHM) THD = 10 %, 1 kHz
	S/N ratio (analogue input)	65 dB
	Separation (1kHz)	65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For power supply and power consumption information, refer to the label attached to the product.

※ Open Source Licence Notice

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

LICENSE

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

ENERGY STAR

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG (726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	www.samsung.com/Levant/support (English)
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

SAMSUNG

HW-H500

使用說明書

Wireless Audio - SoundStand

無窮想像，無限可能

感謝您購買三星產品。

欲享受更加全面的服務，請到以下網站註冊您的產品：

www.samsung.com/register

特性

TV SoundConnect

電視聲音連接可讓您透過藍牙連線在 SoundStand 上聆聽來自電視機的聲音，還可讓您控制該聲音。

Surround Sound Expansion(環繞聲擴展)

Surround Sound Expansion(環繞聲擴展) 功能增強了聆聽體驗的深度和廣度。 Surround Sound Expansion(環繞聲擴展) 由 Sonic Emotion 提供技術支援。

特殊音效模式

您可以根據要欣賞的內容類型選擇不同的音效模式 - SPORTS(體育) / VOICE(語音) / MUSIC(音樂) / STANDARD(OFF)(標準(關閉))。

多功能遙控器

您可以使用附送的遙控器，按幾下按鍵即可控制各種操作。

藍牙功能

您可以使用藍牙裝置連線到 SoundStand 並欣賞高品質立體聲音樂，所有一切皆無需連線！

安全資訊

安全警告

為防止電擊，請勿拆卸蓋板 (或背板)。
本機內部無使用者可以自行維修的零件。 如需維修，請由專門的服務人員進行維修。

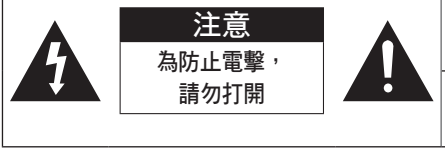

	這個閃電標誌是提醒使用者注意，本產品內部帶有足以造成電擊或人身傷害的「危險電壓」。
	該標誌用於提醒使用者注意本產品隨附的重要說明。

警告 : 請勿將本機暴露在雨中或潮濕場所，以免火災或電擊。

注意 : 為防止電擊，請將寬片插頭完全插入匹配的寬插槽。

- 本設備應始終連接到帶有保護地線連接的交流電插座。
- 設備與電源斷開連接時，必須將插頭從電源插座上拔出，因此電源插頭應隨時保持便於操作。

注意

- 請勿將水滴落或噴灑在設備上， 不得在設備上放置裝有液體的物品，如花瓶。
- 要完全關閉本設備，須將電源插頭從牆上電源插座拔出。 因此，電源插頭應隨時保持便於操作。

注意事項

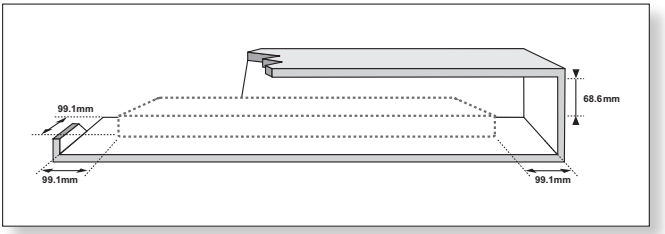

請確保您家中的交流電源符合產品背面標示貼紙上的要求。 請將產品安裝在水平、適當的基座 (家具) 上，並在周邊留下足夠的通風空間 7~10 釐米。 確保通風孔未被堵塞。 請勿將本設備放在放大器或其他會發熱的設備上。 本設備可供連續使用。 要完全斷開設備的電源連接，請從牆上電源插座上拔掉交流電插頭。 如果長時間不使用設備，請拔下其電源插頭。

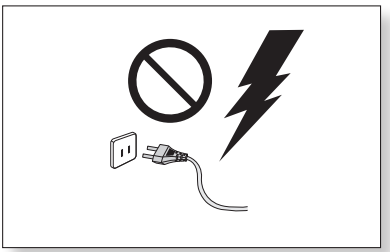

在雷雨天氣時，請從牆上電源插座拔下交流電插頭。 閃電造成的電壓峰值會損壞本設備。

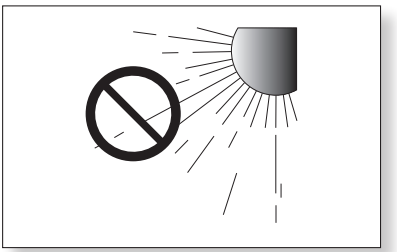

請勿將本設備直接在陽光下暴曬或暴露於其他熱源下。

這可能導致本設備過熱而發生故障。

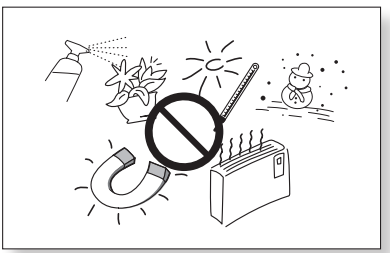

本產品應避免接觸潮濕 (如花瓶) 以及過熱 (如壁爐) 或者會產生強磁或電場的設備。 如果設備發生故障，請從交流電源拔下電源線。 本產品並非供工業使用， 而是僅供個人使用。

如果本產品存放在低溫環境中，則可能會出現冷凝現象。 如果在冬天將本設備運送到室內，則需要等待大約 2 小時的時間，以便本機在使用前達到室內溫度。

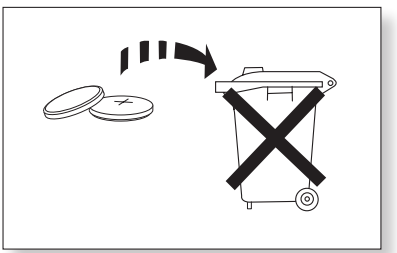

本產品使用的電池含有對環境有害的化學物質。

請勿將電池作為普通生活垃圾棄置。

請勿將電池置於火中。

請勿使電池短路、分解或過熱。

如果沒有正確替換電池，可能會導致危險。

僅可使用同樣或相同類別的電池替換。

目錄

2 特性

3 安全資訊

3 安全警告

4 注意事項

6 使用入門

6 閱讀使用說明書之前注意事項

6 包裝附帶內容

7 安裝

7 SoundStand 安裝

8 描述

8 頂端面板/前面板

9 後面板

10 遙控器

10 遙控器按鍵和功能

12 連接

12 使用光學 (數碼) 纜線或音訊 (模擬) 纜線連接外部裝置

13 功能

13 輸入模式

14 藍牙

16 TV SoundConnect

17 故障排除

18 附錄

18 規格

18 授權

- 本使用說明書中的圖片和圖解僅供參考，可能與實際的產品外觀有所不同。
- 如果出現以下任一情況可能會收取管理費

  (a)您致電請來工程師但產品沒有缺陷 (即您未能認真閱讀本使用說明書)

  (b)您將裝置帶到維修中心但產品沒有缺陷 (即您未能仔細閱讀本使用說明書)
- 在進行任何工作或到府之前，我們將告知您這類管理費的金額。

使用入門

閱讀使用說明書之前注意事項

閱讀使用說明書之前，請注意下列術語。

► 本說明書中使用的圖示

圖示	術語	定義
	注意	表示功能不起作用或設定可能已取消的情況。
	注	表示頁面上有協助功能操作的提示或說明。

► 安全說明與故障排除

1) 在使用本產品之前，請確保熟悉「安全說明」。 (請參閱第 3 頁)

2) 如果出現問題，請查閱「故障排除」。 (請參閱第 17 頁)

► 版權

©2014 Samsung Electronics Co.,Ltd.
版權所有；未經 Samsung Electronics Co.,Ltd. 事先書面許可，不得複製或影印本使用說明書的部分或全部內容。

包裝附帶內容

請檢查是否提供下面所示的附件。

遙控器 /
鋰电池
(3V : CR2032)



使用說明書

AUX 纜線 (3.5Φ)

適配器

電源線

● 附件的外觀可能與上述圖例略有不同。

安裝

SOUNDSTAND 安裝

如果您要將電視機放置在 SoundStand 上方，請確保電視機滿足下面兩個條件：

- 最大電視機重量： **26 kg**
- 最大電視機支架尺寸： **小於 600 mm X 300 mm**

※ 大部分電視最多為 1016 mm 和 26 kg（* 電視螢幕大小和支架類型可能各不相同）

► 如何安裝 SoundStand

	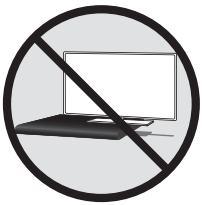
正確的安裝	**不要將電視機放置在 SoundStand 的側邊**
	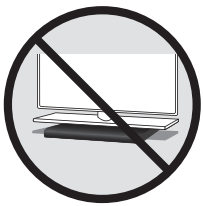
不要將 SoundStand 放置在靠近電視機架、桌子或娛樂中心邊緣的位置	**不要將底座大於 SoundStand 頂端表面的電視機放置在 SoundStand 上**

- 不要將電視機放置在 SoundStand 的側邊，電視機可能會側翻，造成人員受傷。
- 安裝時，請確保將 SoundStand 放置在架子、桌子等的中央位置。 不要將它放置在靠近邊緣的位置。
- 如果電視機比 SoundStand 大，請考慮牆壁安裝型電視機安裝或將 SoundStand 放置在平穩的表面上。
- 安裝時，SoundStand 與牆壁之間至少留出 5 公分的距離。

描述

頂端面板/前面板

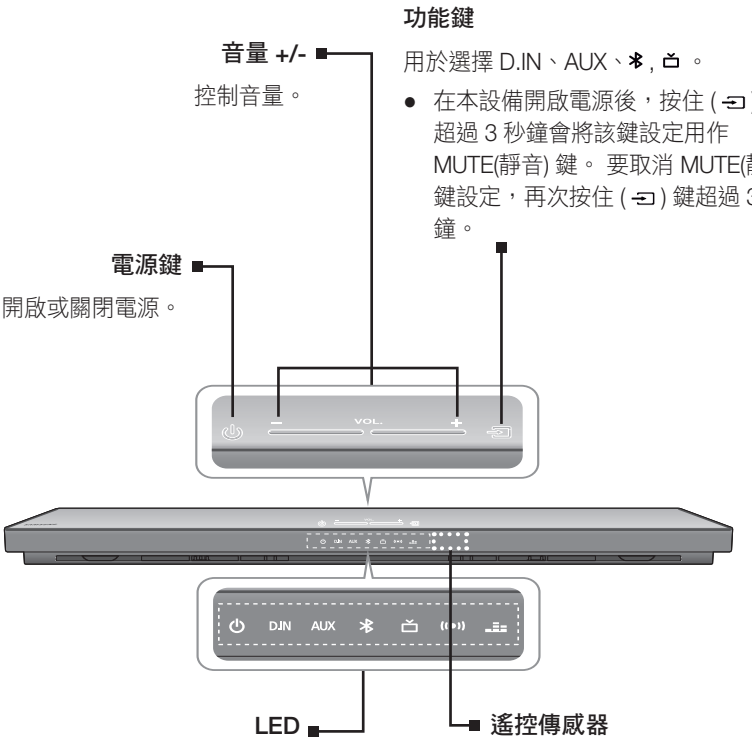

- 開啟本設備時，等待 4 至 5 秒鐘後才會發出聲音。
- 當您按每個按鍵時，LED 將亮起， 3 秒鐘后 LED 變暗。
- 如果希望僅欣賞來自 SoundStand 的聲音，必須在電視機的 Audio Setup(音訊設定) 功能表中關閉電視機的音箱。 請參閱電視機隨附的使用說明書。

描述

後面板

OPTICAL IN

連接至外部裝置的數碼 (光學) 輸出。

AUX IN

連接至外部裝置的模擬輸出。

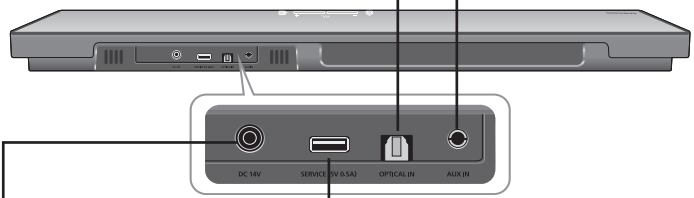

電源輸入

將交流電源適配器插孔正常連接到電源插孔，然後將交流電源適配器插頭插入壁裝電源插座。

SERVICE 埠(僅適用於更新)

更新裝置的韌體。

- 從壁裝電源插座斷開交流電源適配器的電源線時，請拔出插頭。 切勿拉扯電源線。
- 在組件之間的連接完成之前，切勿將本設備或其他組件連接到交流電源插座。
- 關於產品安全資訊，請參閱粘貼在裝置底部的中文標籤。

遙控器

遙控器按鍵和功能

POWER
開啟或關閉 SoundStand 的電源。

D.IN
按 **D.IN** 鍵選擇 Digital in.

VOLUME
調節設備的音量。
音量設定為最大值或最小值時，所有 LED 開啟。

Bluetooth
按 **Bluetooth** 鍵選擇 Bluetooth 模式。

Bluetooth POWER
按遙控器上的 **Bluetooth POWER** 鍵開啟和關閉 Bluetooth Power 功能。
如需詳細資料，請參閱第 15 和 16 頁。

► 在遙控器中裝上電池

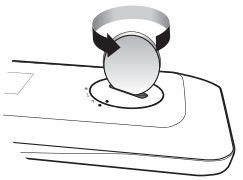

1. 若要開啟電池蓋，請使用適用的錢幣逆時針轉動遙控器電池蓋以將其取下，如上圖中所示。

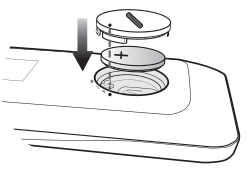

2. 裝入一節 3V 電池。 裝入電池時，讓正 (+) 極朝上。 蓋上電池蓋，對齊 '●' 標誌，如上圖中所示。

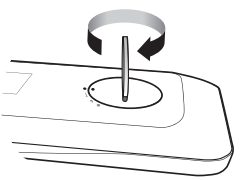

3. 若要關閉電池蓋，請使用適用的錢幣順時針轉動遙控器電池蓋，直到它固定到位為止。

MUTE

按 **MUTE** 鍵音量降低至 0。 再按一下則使聲音恢復至上次的音量。如果您開啟靜音，當前功能 LED 將持續閃爍。

AUX

按 **AUX** 鍵選擇 AUX 模式。

WOOFER LEVEL

您可以控制重低音音箱音量。
如果要提高或降低重低音音箱的音量，請按 **WOOFER LEVEL** 鍵上的 ∧ 或 ∨ 鍵。 其設定範圍從 SW -6 至 SW +6。

Surr.Sound (Surround Sound Expansion)

按遙控器上的 **Surr.Sound** 鍵以增強聲音深度和廣度的程度。

Soundconnect

按 **Soundconnect** 鍵選擇 TV SoundConnect.

AUTO POWER

透過光學插孔將 SoundStand 同步至連接的光學來源，如此只要您開啟電視機，它也會自動開啟。如需詳細資料，請參閱第 12 頁。

SOUND EFFECT

按遙控器上的每個模式鍵 (MUSIC, VOICE, SPORTS, STANDARD) 選擇聲音模式。 如果您要欣賞原始聲音，請選擇 **STANDARD** 模式。 建議根據來源資料以及您的個人品味選擇音效。

- SoundStand 是三星的專利名稱。
- 使用電視機的遙控器操控電視機。

連接

使用光學 (數碼) 纜線或音訊 (模擬) 纜線連接外部裝置

本設備配有一個光學輸入數碼插孔和一個音訊模擬輸入插孔，可讓您以兩種方式將它連接至電視機。

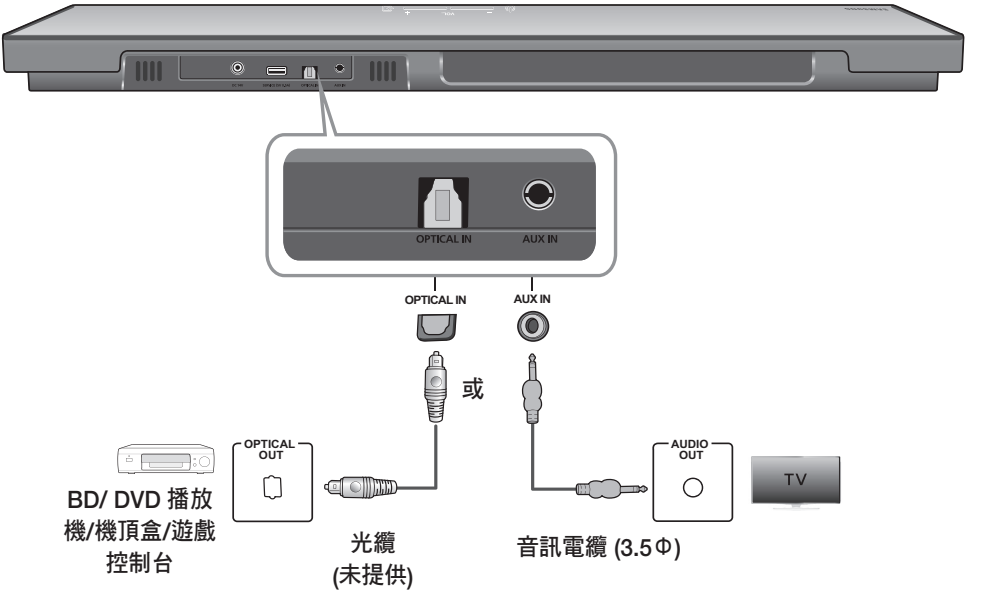

OPTICAL IN

將主設備上的 **OPTICAL IN** 連接至電視機或來源裝置的 OPTICAL OUT。

- 在組件之間的所有連接完成之前，切勿將本產品或電視機連接到牆上插座。
- 在移動或安裝本產品之前，請確定關閉電源並拔下電源線。

AUTO POWER LINK 功能

AUTO POWER LINK	LED
開啟	綠色 ⏻ 和 D.IN 閃爍
關閉	紅色 ⏻ 和 D.IN 閃爍

- **使用 AUTO POWER LINK 功能**
  - 使用光纜將主設備連接至電視機，設置自動電源連接功能為開啟狀態，當開啟電視機時 SoundStand 將自動開啟。
  - 按 SoundStand 遙控器上的 **AUTO POWER** 鍵開啟或關閉自動電源功能。
  - 每次按下 **AUTO POWER** 鍵時，自動電源功能隨之開啟或關閉。
  - 根據連接設備的不同，自動電源連接功能可能不可用。

或,

AUX IN

將主設備上的 **AUX IN**(音訊) 連接至電視機或來源裝置的 AUDIO OUT。

功能

輸入模式

按下遙控器上的每個模式鍵或產品頂端面板上的 (⮆) 鍵，選擇所需的模式。

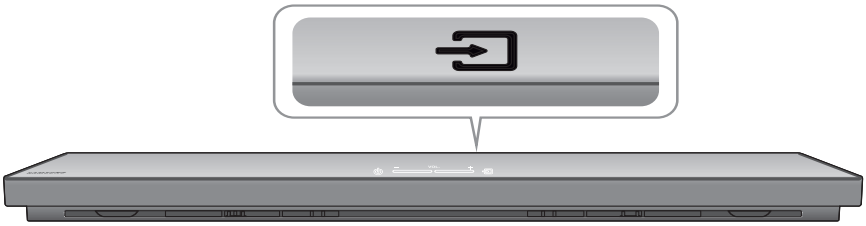

輸入模式	顯示
光學數碼輸入	**D.IN**
AUX 輸入	**AUX**
BLUETOOTH 模式	✱
TV SoundConnect	📺

本設備在下列情況下會自動關閉.

- D.IN/BT/TV SoundConnect
  - 如果 25 分鐘沒有音訊訊號。
- AUX 模式
  - 如果 AUX 纜線中斷連接長達 25 分鐘。
  - 如果 AUX 纜線連接後 8 小時內沒有按鍵輸入， 若要開啟或關閉此功能，在 AUX 模式下按住 AUX 鍵 5 秒鐘。 AUTO POWER DOWN ON / OFF 將出現在顯示螢幕上。

AUTO POWER DOWN	LED
開啟	綠色 ⏻ 和 AUX 閃爍
關閉	紅色 ⏻ 和 AUX 閃爍

藍牙

您可以使用藍牙裝置來欣賞高品質立體聲音樂，所有一切皆無需連線！

► 將 SoundStand 連接至藍牙裝置

檢查藍牙裝置是否支援符合藍牙的立體聲耳機功能。

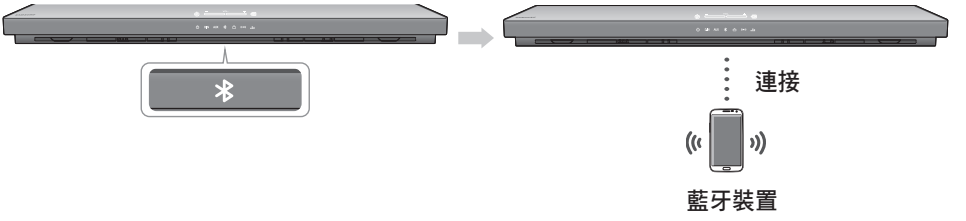

1. 按產品頂端面板上的 (⮌) 鍵，以顯示 ✱ LED 圖標。
   - ✱ LED 閃爍說明藍牙裝置尚未連接。
2. 在要連接的藍牙裝置上選擇藍牙功能表。(請參閱藍牙裝置的使用說明書。)
3. 在藍牙裝置上選擇立體聲耳機功能表。
   - 您將會看到掃描到的裝置清單。
4. 從該清單中選擇 **"[Samsung] SoundStand"**。
   - 如果藍牙裝置成功連接至 SoundStand，✱ LED 停止閃爍。
   - 如果藍牙裝置無法與 SoundStand 配對，請刪除之前被藍牙裝置找到的 "**[Samsung] SoundStand**"，讓其重新搜尋 SoundStand。
5. 在連接的裝置上播放音樂。
   - 您可以透過 SoundStand 聆聽在連接的藍牙裝置上播放的音樂。

- 在連接藍牙裝置時，如果系統要求您提供 PIN 碼，請輸入 <0000>。
- 一次只能配對一個藍牙裝置。
- 關閉 SoundStand 時，藍牙連接將會終止。
- 在下列情況下，SoundStand 可能無法正確執行藍牙搜尋或連接：
  - 如果 SoundStand 周圍具有強電場。
  - 如果多個藍牙裝置同時與 SoundStand 配對。
  - 如果藍牙裝置已關閉、沒有就位或發生故障。
  - 請注意，如微波爐、無線 LAN 適配器、螢光燈和煤氣爐之類的裝置與藍牙裝置使用相同的頻率範圍，可能導致電子干擾。
- SoundStand 支援 SBC 資料 (44.1kHz，48kHz)。
- 僅連接到支援 A2DP (AV) 功能的藍牙裝置。
- 您無法將 SoundStand 連接至僅支援 HF (免持) 功能的藍牙裝置。

► 藍牙開啟電源功能 (Bluetooth POWER)

當 Bluetooth Power On (藍牙開啟電源) 功能開啟且 SoundStand 關閉時，如果先前配對的藍牙裝置嘗試與 SoundStand 配對，則 SoundStand 會自動開啟。

1. 按遙控器上的 **Bluetooth POWER** 鍵。
2. 綠色 ⏻ , ✱ 和 🔌 LED 會出現在 SoundStand 的顯示螢幕上。

- 僅當 SoundStand 列出在藍牙裝置的搜尋到的裝置清單中時可用。 (藍牙裝置和 SoundStand 先前至少必須已配對一次。)
- 僅當藍牙 LED 閃爍時，SoundStand 才會出現在藍牙裝置的搜尋到的裝置清單中。
- 在電視聲音連接模式下，無法將 SoundStand 與另一個藍牙裝置配對。

► 從 SoundStand 中斷藍牙裝置

您可以從 SoundStand 中斷藍牙裝置。 如需說明，請參閱藍牙裝置的使用說明書。

- SoundStand 將會中斷連接。
- SoundStand 與藍牙裝置中斷連接時，SoundStand 將會在前顯示螢幕上顯示 ✱ 。

► 從藍牙裝置中斷 SoundStand

按下遙控器上其它模式鍵中的一個按鍵或產品頂端面板上的 (⮆) 鍵以從 ✱ 切換至另一種模式，或者關閉 SoundStand。

- 連接的藍牙裝置將會等待一定的時間，獲得 SoundStand 的回應後再終止連線。 (中斷連接時間可能會視具體的藍牙裝置而不同)

- 在藍牙連接模式下，如果 SoundStand 與藍牙裝置之間的距離超出 5 公尺，藍牙連線將會中斷。

有關藍牙的更多資訊

藍牙是一種技術，可使藍牙相容裝置透過短波無線連接輕鬆地彼此互連。

- 根據使用情況下，藍牙裝置在下列條件下可能會導致躁聲或故障：
  - 當身體的一部分接觸到藍牙裝置或 SoundStand 的接收/傳輸系統時。
  - 由於牆壁、角落或辦公分區的障礙物導致的電子差異。
  - 由相同頻帶裝置 (包括醫療設備、微波爐和無線 LAN) 引起的電子干擾。
- 將 SoundStand 和藍牙裝置保持較近的距離以配對。
- SoundStand 與藍牙裝置之間的距離越遠，訊號品質就越差。
  如果距離超出藍牙作業範圍，連線便會中斷。
- 在接收敏感性較差的區域，藍牙連線可能無法正常工作。
- 藍牙連線僅在其靠近設備時有效。 如果藍牙裝置超出範圍，連線將會自動中斷。 即使在範圍內，聲音品質也可能會由於障礙物 (如牆壁或門) 而下降。
- 此無線裝置在其作業期間可能會導致電子干擾。

TV SOUNDCONNECT

您可以透過 TV SoundConnect 功能欣賞三星電視機（支援 SoundShare）的聲音。

► 將電視機連接至 SoundStand

1. 開啟電視機和 SoundStand。
   - 將電視機的 "Add New Device(新增裝置)" 功能表設定為 "On (開啟)"。
2. 按主裝置頂部面板上的 (⮆) 鍵或遙控器上的 **Soundconnect** 鍵選擇 **TV** 模式。
   - LED 閃爍說明電視機尚未連接。
3. 在電視機上，將會顯示一則訊息，詢問您是否要啟用電視聲音連接功能。 電視畫面上會顯示 "[Samsung] SoundStand"。
4. 使用電視機的遙控器選取 **<Yes>** (是) 以完成連接電視機與 SoundStand。
   - 如果電視機已成功連接，LED 停止閃爍。

- 將 SoundStand 的模式從電視切換為其他模式會自動終止電視聲音連接。
- 若要將 SoundStand 連接至其他電視機，必須終止現有連線。
- 終止與現有電視機的連線，然後按遙控器上的 **Soundconnect** 鍵 5 秒鐘以連接至另一台電視機。

- 自從 2012 年起發行的一些三星電視機支援電視聲音連接 (SoundShare) 功能。在開始之前，請檢查您的電視機是否支援電視聲音連接 (SoundShare) 功能。如需詳細資訊，請參閱電視機的使用說明書。)
- 如果您的三星電視機是 2014 年之前發行的，請檢查 SoundShare 設定功能表。
- 如果電視機與 SoundStand 之間的距離超過 5 公尺，連線可能會不穩定或音訊可能會斷斷續續。 如果出現這種情況，請重新安放電視機或 SoundStand，使得它們之間的距離在可操作範圍內，然後重新建立電視聲音連接連線。

- 電視聲音連接工作範圍
  - 建議的配對範圍： 50 公分 以內
  - 建議的操作範圍: 5 公尺 以內

► 使用藍牙開啟電源功能

僅當使用 TV SoundConnect 將 SoundStand 連接至藍牙相容電視機之後，Bluetooth POWER On 功能才可用。
開啟 Bluetooth POWER On 功能時，開啟或關閉連接的電視機還會開啟或關閉 SoundStand 的電源。

1. 使用電視聲音連接功能將電視機連接至 SoundStand。
2. 按下 SoundStand 遙控器上的 **Bluetooth POWER** 鍵。 綠色 ⏻ , ✱ 和 LED 會出現在 SoundStand 的顯示螢幕上。
   - 綠色 ⏻ : SoundStand 會在您開啟或關閉電視機時開啟或關閉。
   - 紅色 ⏻ : SoundStand 僅在您關閉電視機時關閉。

- 只有在 2013 年起發行的一些三星電視機支援此功能。
- 如果透過電視聲音連接將 SoundStand 連接至電視機，然後您透過關閉電視機來關閉 SoundStand，則 Bluetooth Power(藍牙電源) 功能將無法開啟 SoundStand，即使將其他藍牙裝置連接至它也不例外。

故障排除

在請求服務前，請檢查下列內容。

設備無法開啟電源。	
• 電源線是否已插入插座？	→ 將電源插頭連接至電源插座。

按下按鍵時，相應的功能無法運作。	
• 空氣中有靜電嗎？	→ 拔下電源插頭，然後重新連接。

不發出聲音。	
• 靜音功能是否開啟？	→ 按下 Mute 鍵以取消此功能。
• 音量是否設定為最小？	→ 調整音量。

遙控器不起作用。	
• 電池是否用盡？	→ 更換新電池。
• 遙控器與主設備之間的距離是否太遠？	→ 移近本設備。

電視聲音連接(電視機配對) 失敗。	
• 電視機支援電視聲音連接嗎？	→ 自從 2012 年起發行的一些三星電視機支援電視聲音連接功能。請檢查電視機是否支援電視聲音連接。
• 電視機固件是最新版本嗎？	→ 以最新固件更新電視機。
• 連接時有發生錯誤嗎？	→ 聯絡三星服務中心。
• 重設 TV 模式並再次連接。	→ 按住 **Soundconnect** 鍵 5 秒鐘以重設電視聲音連接連線。

附錄

規格

型號名稱	HW-H500

一般	**USB**	5V/0.5A
	重量	3.6 千克
	尺寸（寬 x 深 x 高）	605 x 37 x 305 毫米
	工作溫度範圍	+5 ℃ 到 +35 ℃
	工作濕度範圍	10 % 到 75 %
放大器	**額定輸出功率**	60 W(MID/TWT = 8 OHM, SW = 4 OHM) THD = 10 %, 1 kHz
	訊噪比（模擬輸入）	65 dB
	分離度 (1kHz)	65 dB

* 訊噪比、失真度、分離度與可用靈敏度基於使用 AES (音訊工程學會) 指導原則的測量。

* 額定規格
- Samsung Electronics Co., Ltd 保留隨時變更規格的權利，恕不另行通知。
- 重量和尺寸為估計值。
- 電源和消耗功率，請參考本產品上的標籤。

※開源軟件許可聲明

- 要傳送關於開放來源的查詢與請求，請透過電子郵件 (oss.request@samsung.com) 聯絡三星。

授權

DOLBY DIGITAL

根據 Dolby Laboratories 的許可證製造。 Dolby 和雙 D 標誌是 Dolby Laboratories 的商標。

dts 2.0 Channel

如需 DTS 專利，請造訪 http://patents.dts.com。根據 DTS Licensing Limited 的許可證製造。DTS、該標誌 & DTS 和該標誌一起均為 DTS, Inc. 的註冊商標，而 DTS 2.0 Channel 是 DTS, Inc. 的商標。©DTS, Inc. 版權所有。

ENERGY STAR

在全球範圍內聯絡三星

如果您有任何關於三星產品的問題或建議，請聯絡三星客戶服務中心。

區域	聯絡中心 ☎	網址
▪ 亞太地區		
澳洲	1300 362 603	www.samsung.com/au/support
紐西蘭	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
中國	400-810-5858	www.samsung.com/cn/support
香港	(852) 3698 4698	www.samsung.com/hk/support (中文) www.samsung.com/hk_en/support (英文)
印度	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
印尼	0800112888 021-56997777	www.samsung.com/id/support
日本	0120-327-527	www.samsung.com/jp/support
馬來西亞	1800-88-9999	www.samsung.com/my/support
菲律賓	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
新加坡	1800-SAMSUNG (726-7864)	www.samsung.com/sg/support
泰國	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
台灣	0800-32-9999	www.samsung.com/tw/support
越南	1800 588 889	www.samsung.com/vn/support
▪ MENA		
阿拉伯聯合大公國	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (英文) www.samsung.com/ae_ar/support (阿拉伯文)
阿曼	800-SAMSUNG (726-7864)	
科威特	183-2255 (183-CALL)	
巴林	8000-4726	
卡達	800-2255 (800-CALL)	
埃及	08000-726786 16580	www.samsung.com/eg/support
阿爾及利亞	021 36 11 00	www.samsung.com/n_africa/support
巴基斯坦	0800-Samsung (72678)	www.samsung.com/pk/support
突尼斯	80-1000-12	www.samsung.com/n_africa/support
約旦	0800-22273 06 5777444	www.samsung.com/Levant/support (英文)
敘利亞	18252273	www.samsung.com/Levant/support (英文)
伊朗	021-8255	www.samsung.com/iran/support
摩洛哥	080 100 2255	www.samsung.com/n_africa/support
沙烏地阿拉伯	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (英文)
土耳其	444 77 11	www.samsung.com/tr/support
▪ 非洲		
尼日利亞	0800-726-7864	www.samsung.com/africa_en/support
加納	0800-10077 0302-200077	
象牙海岸	8000 0077	www.samsung.com/africa_fr/support
塞內加爾	800-00-0077	
喀麥隆	7095- 0077	
肯雅	0800 545 545	www.samsung.com/support
烏干達	0800 300 300	
坦桑尼亞	0685 88 99 00	
盧旺達	9999	
布隆迪	200	
DRC	499999	
蘇丹	1969	
南非	0860 SAMSUNG (726 7864)	www.samsung.com/support
博茨瓦那	8007260000	
納米比亞	08 197 267 864	
尚比亞	0211 350370	
莫桑比克	847267864 / 827267864	